

RDM Communicator™

The RDM communicator is a tool box for remote setting of Robe and Anolis fixtures via DMX link. Its main purpose is to set fixture options (DMX address, DMX mode...etc) for Anolis non-display fixtures like ArcPad Xtreme, ArcPad 48 Integral but can be used with any Robe or Anolis fixtures which support RDM protocol.



Technical Specification

Main features

- Setting user options and reading fixture information of any Robe fixture with RDM protocol
- Possibility to set multiple fixtures on DMX line
- Graphic touch screen
- Setting user options and reading fixture information of any Robe fixture with RDM protocol
- Possibility to set multiple fixtures on DMX line
- Graphic touch screen

Approvals

- CE
- CE

Supported functions

- DMX address setting
- DMX mode selecting
- Pan/tilt setting
- DMX address setting
- DMX mode selecting
- Pan/tilt setting